

K:M PRECISION SHOOTING PRODUCTS

CONTROL • ACCURACY • PRECISION



K&M 50 BMG CASE LENGTH TRIMMER

Instructions for Use

- Never use this tool in a case with a live primer.
- Case length trimmer chamfers the inside and outside of the case mouth while it trims the case to length.
- Precise case length is controlled by the guide pin that protrudes through the flash hole and datum's on the shell holder boss of the power adapter.
- Slide empty unprimed case into the shell holder, hold the hex shell holder and rotate handle clockwise until case is clamped into power adapter. The cross hole in the shell holder is provided to place the hex key wrench through for extra leverage while tightening the shell holder.
- Place clamped case over the shaft of the case trimmer and rotate case clockwise until the guide pin bottoms out on the shell holder boss. For best results use a light feed rate during the cutting process.
- Cutter is adjusted by loosening the clamp screw and turning the hex adjusting nut.
- Case can be driven with the handle, or remove the handle from the power adapter and drive with a cordless screwdriver. Do not use a high speed drill as cutter can be damaged.

**K & M Precision Shooting
Products LLC
6852 Lakeshore Drive
West Olive, MI 49460**

**Phone 616-399-7894
Fax 616-298-8652**

Web: www.kmshooting.com

**See website for
details.**