




PRECISION SHOOTING PRODUCTS

CONTROL • ACCURACY • PRECISION


INSTALATION INSTRUCTIONS TO ADD FORCE MEASUREMENT TO K&M ARBOR PRESS




Loosen four column screws

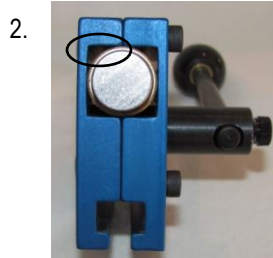


Remove press head from column and install force option on lower end of ram. Install force rod through clearance in upper left corner of head assembly as noted above.

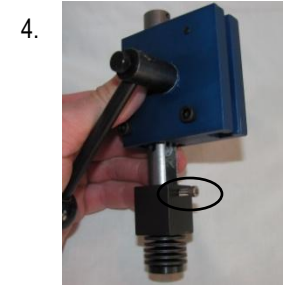

Gently tighten clamp screw. Do not over tighten.

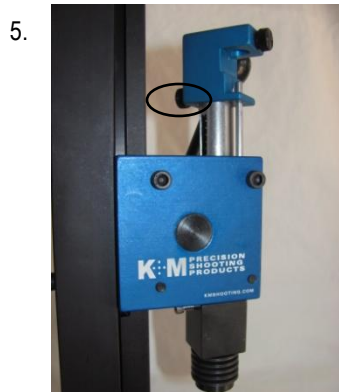

Install press head back on press column and tighten four column screws. Install blue dial indicator bracket on top of ram, position so force rod is centered in the dial indicator bracket clearance hole and tighten thumb screw.

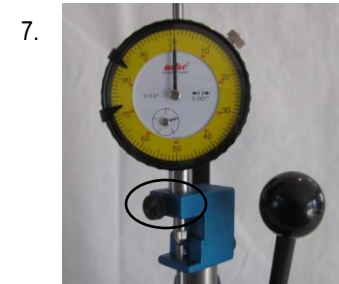

Install dial indicator into indicator bracket and tighten thumb screw.

K & M Precision Shooting Products LLC
6852 Lakeshore Drive
West Olive, MI 49460

Phone 616-399-7894
Fax 616-298-8652

kmshooting.com